


METHOD OF REPLACING V.F.O. DRIVE
ON KW 2000 SERIES UNITS.

PLACE A SUITABLE ADHESIVE TAPE SECURELY ALONG
TOP EDGE OF DRUM BEHIND DIAL. THIS WILL ENABLE
DRIVE CORD TO BE MANIPULATED WITHOUT LOSING
SPRING TENSION.

REMOVE KNOB (LOWER CENTRAL POSITION ON FRONT
PANEL) FROM SPINDLE. THROUGH HOLE IN FRONT
PANEL RELEASE TWO SCREWS SECURE DRIVE UNIT,
UNWIND DRIVE CORD & REMOVE DRIVE UNIT.

FIT NEW DRIVE UNIT USING REVERSE PROCEDURE.

DRIVE CORD ~~22~~ $\frac{1}{4}$ "

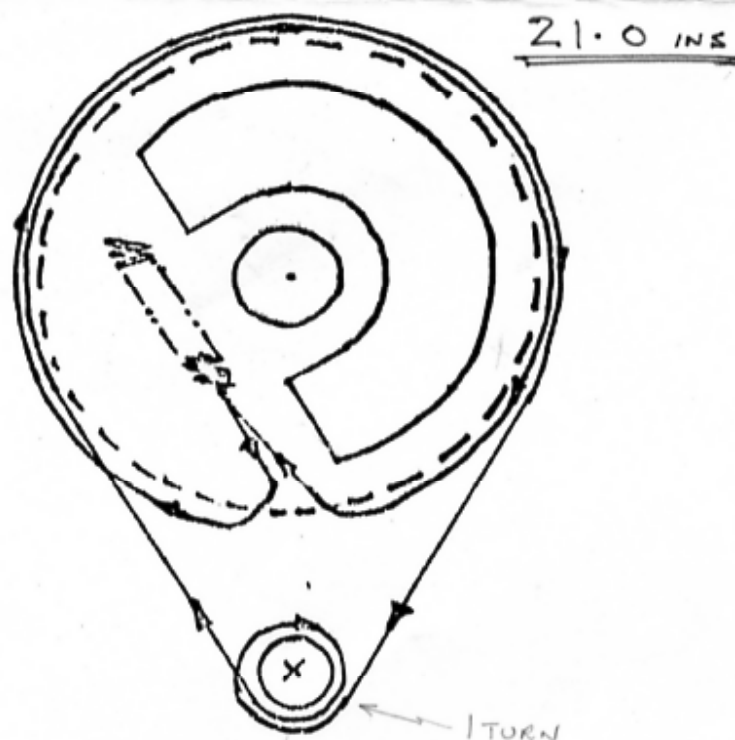

METHOD OF LOADING DRIVE CORD.

VIEW SHOWN FROM REAR OF DIAL.